



Thank you for purchasing the Safety Angel Guardian watch.

All GPS Trackers require a SIM card

To get the location data from the GPS tracking unit some transmission channel is required.

Your Safety Angel Guardian Watch is fitted with a Vodacom "Pre- Paid pay-as- you-go SIM card. Since it will use very little credit "Pre-Paid" is usually the most cost effective way to go.

You can directly recharge the sim card from any internet banking website.

Download the MyVodacom app from your App store to view the credit balance on the sim card anytime.

Before you use your device please recharge the SIM card with "Data bundles" and/or "Airtime"

PLEASE NOTE: The watch uses "data bundles" to send its location to the server for you to view the location on the APP. However, should you want to use the phone calling or SOS function then you will also need to load normal "Airtime" as the watch will then make a cellular call to the pre-programmed numbers and function as normal mobile phone.

Our Facebook page includes updates and information not always found on our website. To ensure that you always receive the latest updates for your App, please follow the link below and follow us on Facebook!

SUPPORT

Should you require any assistance with the setup of your watch please send an email with:

1. The Watch Mobile Number
2. Your email address and account password that you register on the APP

Before sending the above email please ensure that there is indeed credit available on the watch sim card.

safetyangelsa@gmail.com.

For all your vehicle and asset tracking needs please visit our sister company [DiyTrack](#)



Child Guardian Camo

GPS Tracker

Thank you for purchasing The Safety Angel Teen Guardian Watch

The Safety Angel Teen Guardian Watch is a small and powerful data and voice tracking device which has been developed for personal positioning. It is based on the existing GSM /GPRS network and GPS satellites. Prior to use, thoroughly review this guide.

All GPS Trackers require a Simcard

The Safety Angel Teen Guardian Watch requires a SIM card to be able to transmit the longitude and latitude coordinates to a designated server by GPRS. Since it will use very little credit "Pre-Paid" is usually the most cost effective way to go. There are no tie-in contracts, minimum use restrictions, hidden fees or ongoing subscriptions at all - you just pay for the data or airtime that the Safety Angel Teen Guardian Watch will use and no more!

IMPORTANT

Your Safety Angel watch will not operate if there is no credit/airtime available on the SIM card.

BEFORE continuing please ensure that you have recharged the SIM card.



PLEASE NOTE: The watch uses "data bundles" to send its location to the server for you view the location on the APP.

However, should you want to use the Phone book or SOS Functions then you will also need to load normal "Airtime" as the watch will then make a cellular call to the preprogrammed numbers and function as normal mobile phone

Recharging the Simcard

You can directly recharge the simcard from any internet banking website, Register the simcard at www.Vodacom.co.za and then download the MyVodacom app on your phone to view the credit balance anytime

IMPORTANT

GPS signals are carried through waves at a frequency that does not move easily through concrete and metal objects. All GPS devices rely on a series of satellites in order to determine where it is physically located.

The signals sent from the satellites **cannot** penetrate buildings.

When you use a GPS inside a building, a wide variety of physical barriers and potential interference sources hinder the device to pinpoint its location.

Therefore when outdoors the device will use the satellites to pinpoint its position to an accuracy of around 10meters.

Should the device not be able to get a lock onto the Satellites for whatever reason it will then use the closest Wi-Fi location to determine its position.

Example, if you are in a shopping Mall the watch cannot connect to the GPS satellites due to the fact the GPS signals cannot penetrate through buildings , so then it will use the nearest Wi-Fi such as Spur or Wimpy etc.

Please note it does NOT connect to the Wi-Fi it only "reads" the location of the Wi-Fi hot spot and then sends that as its position. Should the watch not be able to connect to The Satellites or a Wi-Fi Hot spot it will then use LBS and use the nearest cell phone tower as its nearest position.

WARNING

The Watch is NOT waterproof
You CANNOT swim, bath or shower with it

Register the Simcard

Register the Tracker simcard on My Vodacom

To view the credit/ Airtime / Data bundles balance you will need to register the simcard

Visit www.vodacom.co.za / click "register"

Register for My Vodacom

1

Login Register

First name *

John

Cellphone number *

Insert the tracker mobile number

Create password *

.....

The password must be a minimum of 8 characters and must contain at least 1 number, 1 uppercase and 1 lowercase letter

Confirm password *

.....

Show password

I'm not a robot

By clicking Continue I confirm that I have read, understood and agree with the [Terms and Conditions](#)

Continue

Register for My Vodacom

2

Login Register

Please enter your One-Time Pin (OTP)

Enter OTP

Your OTP has been sent to 277*****67.

This number cannot receive SMSs

Resend OTP

Continue

Select this number cannot receive SMSs

3

This number cannot receive SMSs

Please enter your 20-digit SIM card number

Enter SIM card number

Located at the back of your SIM card

Email address *

Email address

Confirm email address *


Confirm email address

Choose a secret question *

Select

Secret answer *

Secret answer

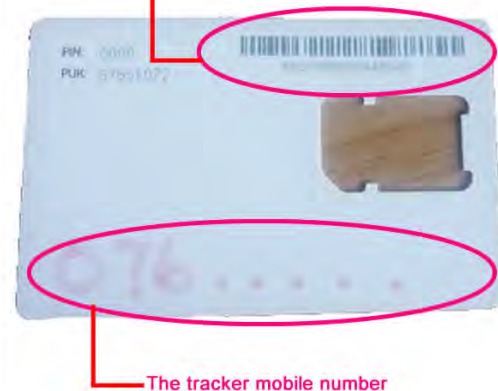

Download the My Vodacom App

After registering on the website you can download the MyVodacom App from your App store, search for MY VODACOM

Recharging the Simcard

You can directly recharge the simcard from any internet banking website,

You can directly recharge the simcard from any internet banking website.

ABSA
FNB
STANDARD BANK
CAPITEC
NEDBANK

Setting Up

You need to send the below 2 SMS text messages from YOUR mobile cell phone to the phone number of the SIMCARD that is in the watch to enable the watch to operate with the App



IMPORTANT

BEFORE continuing please ensure that you have recharged the SIM card in the Child Guardian watch with "normal" **airtime** so that the watch can send a reply sms back to your mobile phone.

Turn the Watch ON

Press the power button (top right) and hold down until you hear the start up tone.

Wait for the simcard indicator light to turn GREEN before sending the bellow sms text messages

Setting Up

To use your Safety Angel Child Guardian watch with the mobile APP, you will first need to send the following SMS text commands to the mobile number of the Child Guardian watch from YOUR own mobile phone.

SMS text to send: pw,123456,ip,52.28.132.157,8001#



pw,123456,ip,52.28.132.157,8001#



The SMS must be sent **exactly** like the above example with **NO spaces** and ALL letters must be **lowercase**.

SMS text to send: pw,123456,apn,internet,,65501#




pw,123456,apn,internet,,65501#



The SMS must be sent **exactly** like the above example with **NO spaces** and ALL letters must be **lowercase**. include ALL comas

Hardware Description

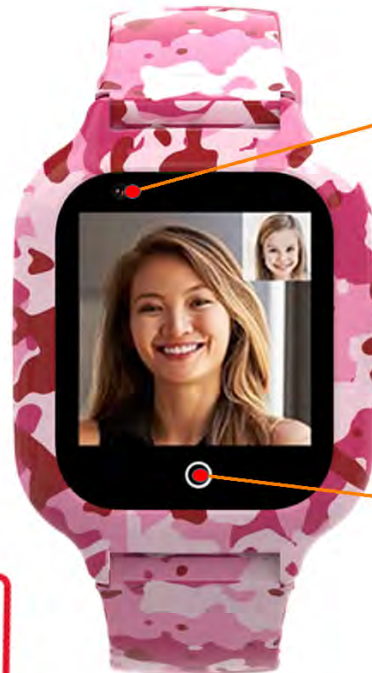

Camera

Power / SOS button

- Long press the button to power on the device
- SOS function:press the button for 5 seconds
- Short press to hang up a call

Multi function touch screen button:
Answer call /home /return button

WARNING

Do **NOT** remove the screen protector (plastic film on the screen)

Charging the Watch

It is imperative that before using your Safety Angel Child Guardian Watch, that the battery must be charged to its full capacity.

To charge the watch, place magnetic plug point onto the charging points at the back of the watch and connect the the other end to a USB phone charger plug.

Please note that the plug must be placed correctly for the watch to charge

The "Battery indicator" will show full stripes when fully charged.



Turn the Watch ON

Press the power On button and hold down until you hear the start up tone.

It will take a few minutes to find a GPS signal, and remember that a GPS signal may not be found whilst indoors

IMPORTANT

it is imperative that The Safety Angel Child Guardian watch is taken outdoors with a clear view of the sky, so that it can get a fix onto the GPS Satellites.

Download the App

Download the mobile App

Search "Setracker" in your app store or scan the QR Code



Scan me

1 Login

Account: Telephone or email

Password: 6-12 characters

Language: Engl. Area: Europe and A.

REGISTER

Push Registration

2 registered

please input your email

please enter verification code: 385N78

Please enter a 6-12 digit password

Language: English Area: Europe and A.

Confirm registration

input your email address

choose a password that you will remember

Select Europe and Africa

3 Add device

Input/scan registration code

Scan or input the **REG code** (silver square sticker with a QR code fixed to the strap)

Equipment nickname

Input your child's name

I am TAs

Select a guardian

4 Relationship selection

I am TAs

father mom grandfather grandmother


brother sister uncle Aunt

son daughter other

Select a guardian icon and push Save

IMPORTANT PLEASE NOTE: You can only register and bind the watch to **ONE** account however, multiple users can login together with the same username and password.

Adding Another same model Watch to the APP

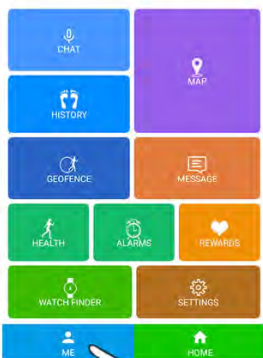

push ME

Account

Personal Data

Device List

Change password

Device List

+ Add device

push Device List

push Add device

5 Add device

Watch id: 0,15 characters

Nickname: 2-30 characters

OK



input the **REG code**

input your child's name

IMPORTANT


Your Safety Angel Teen Guardian watch **will not** be able to phone the contact numbers or use the SOS and monitoring functions if there is no credit/airtime available on the SIM card. **BEFORE** continuing please ensure that you have recharged the SIM card.

Family Numbers Setting

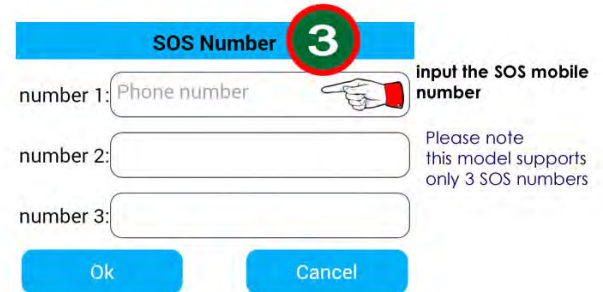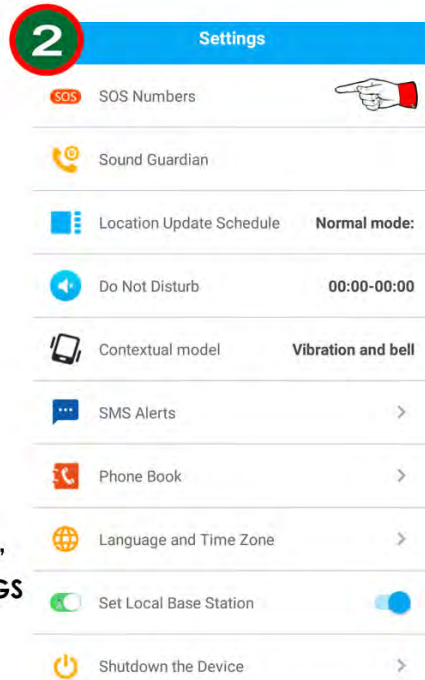

Phone Book Numbers

You child will be able receive and answer calls from these 15 mobile numbers.

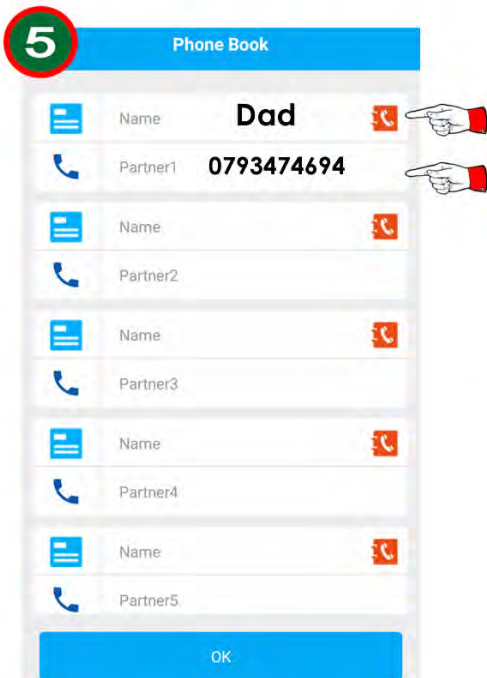

PLEASE NOTE

Credit /Airtime must be available as the watch will make a cellular call to the programmed numbers and function as normal mobile phone.

To make call from the watch, touch the screen and scroll to "Contacts" tap and choose the contact to call
When receiving a call,push the virtual button to answer the call.
Short press the Power button to end a call.

To use the SOS function, push and hold the power button for 4 seconds and then let go.
The Teen Guardian will then call the first sos mobile number, if the 1st number does not answer it will dial the 2nd number (if the 1st number answers the call or goes to voicemail, the watch will **NOT** dial the 2nd number)

SOS Panic Button

To use the SOS function, push and hold the sos panic button for 4 seconds and then let go.
The Teen Guardian will then call the sos mobile number



Locating your Child



Before you continue you **MUST FIRST** take the watch outdoors.

It is imperative that the Safety Angel Child Guardian watch is taken outdoors with a clear view of the sky, so that it can get a fix onto the GPS Satellites.

It will take several minutes to get a fix onto the GPS and remember that a GPS signal may not be found whilst indoors.

IMPORTANT




LBS Location indicates that the watch has **NOT** got a lock onto the satellites and is therefore using the nearest cellular tower for it's location position. LBS location indicates the nearest cellular tower to the watch.

Satellite Location indicates the watch has a lock onto the satellites and will show the correct location position.

WIFI Location : Should the device not be able to get a lock onto the Satellites for whatever reason it will then use the closest Wi-Fi location to determine its position.

Locating on Demand

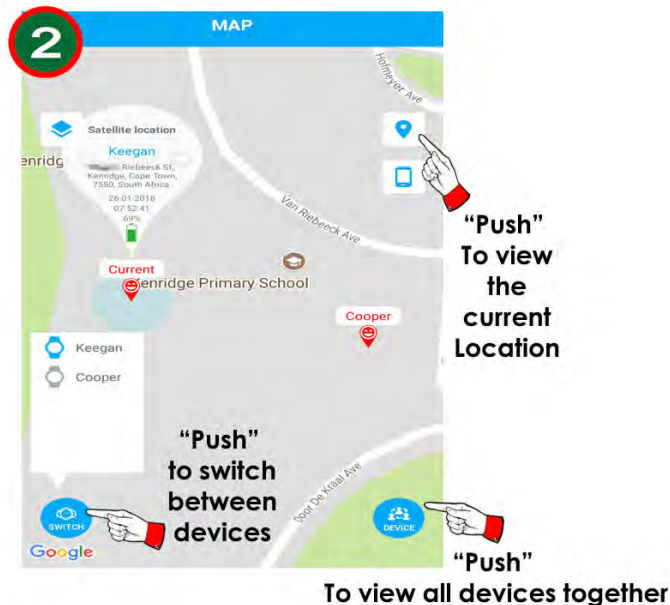


Locating your Child



IMPORTANT



Sleep Mode (Best mode to extend the battery)
You can view the current location of the watch, by pressing the locate icon on the MAP screen

Location Update Schedule	
Normal mode recommended	
Normal mode:10m/t	<input type="radio"/>
Power save mode:1h/t	<input type="radio"/>
Sleep mode: Get positioning manually	<input checked="" type="radio"/>
OK	CANCEL

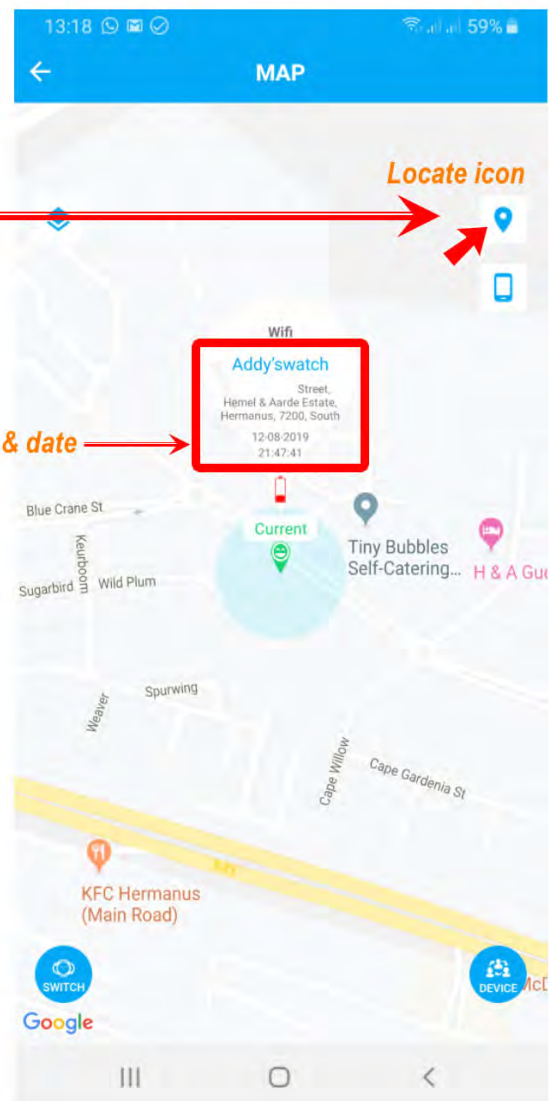


Locating your Child




Location History

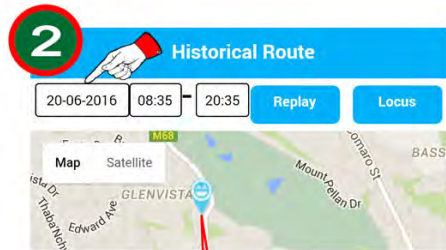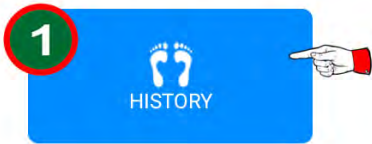

Enter the date and times you want to view"

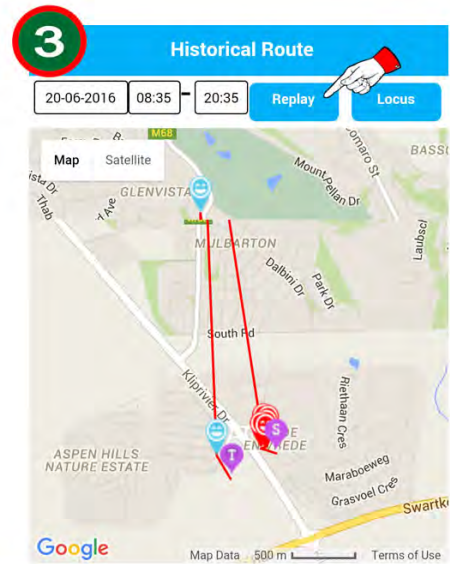

Setting a Safezone

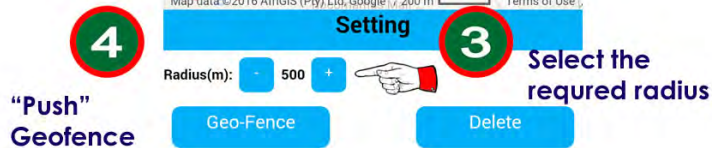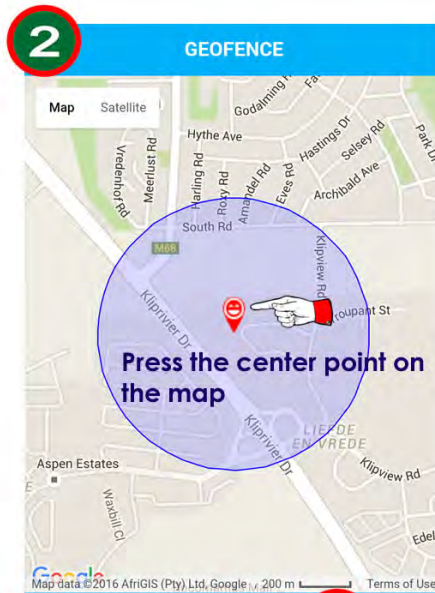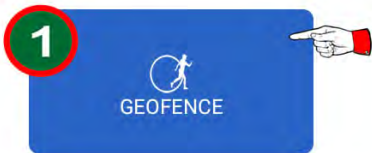


Other Functions


Listen remotely via the microphone



"Push"
Setting

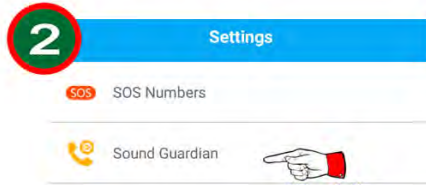

"Push"
Sound Guardian

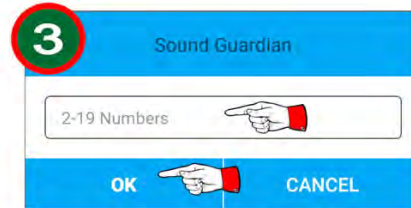


input the phone number the
watch must call

The Child Guardian watch will call the number that you set. Once the Guardian answers the call, the watch will enter surveillance mode, and the wearer will not know that the Guardian is "listening in"


PLEASE NOTE Credit /Airtime must be available as the watch will make a cellular call to the set number and function as normal mobile phone.

Voice Messages

The guardians can send and receive upto 15 seconds voice messages to and from the watch.

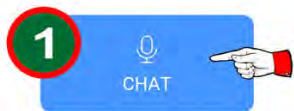

"Push"
Chat

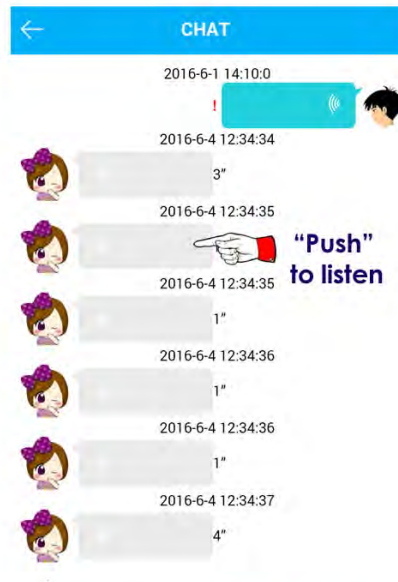

"Push"
to record a voice message





To listen to the voice message on the watch
- Short Press the SOS button

Your child can send a voice message to the guardians
Scroll the screen until you can see the chat interface,
- press and hold the "Talk button" for 3 seconds to start recording.
- Speak into the microphone.
- "Release" the key.


Other Functions

Video Calling

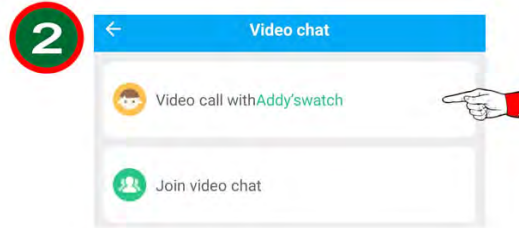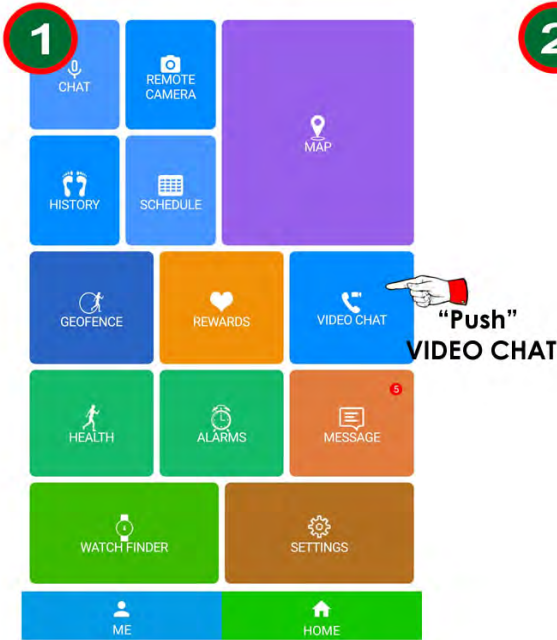



Video Calling From the watch

PLEASE NOTE Credit / Airtime must be available as the watch will make a video call to the set number and function as normal mobile phone.


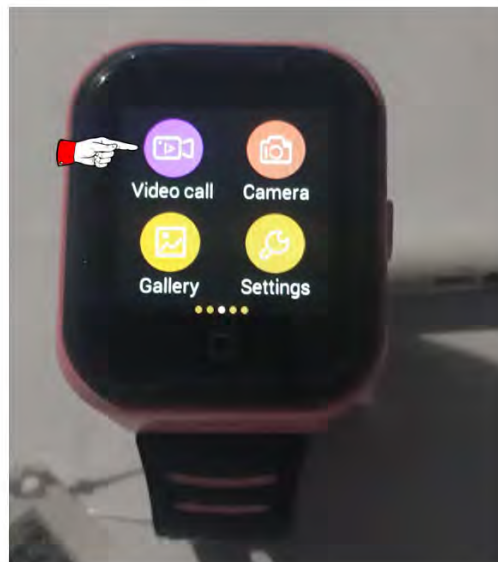


Other Functions



Time Setting

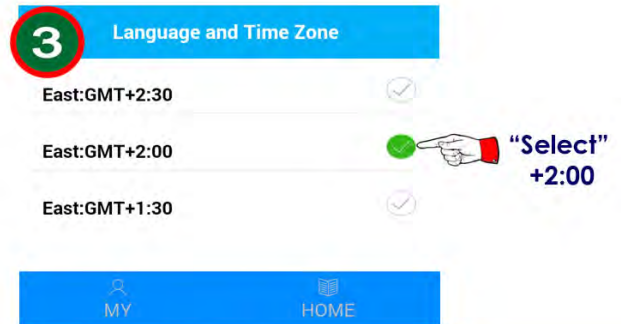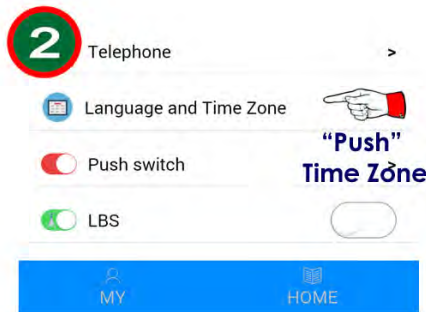

SMS Alerts

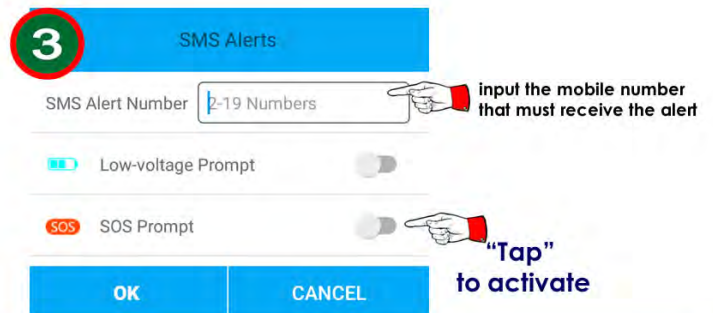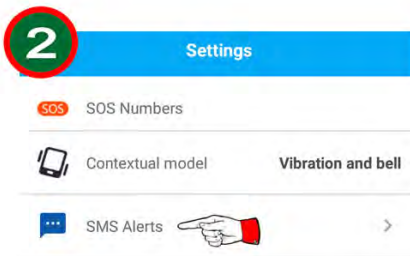

Activity meter

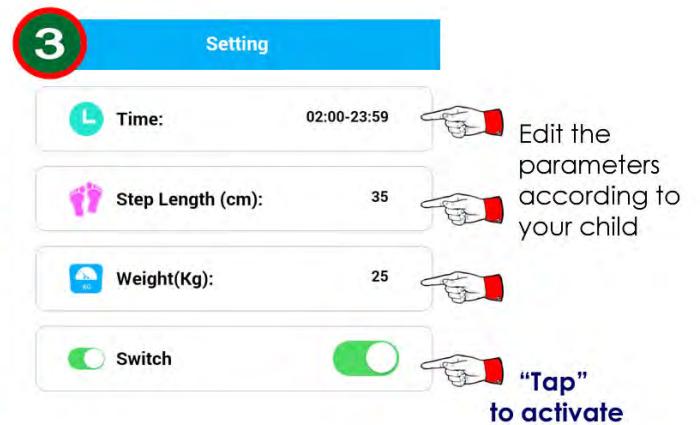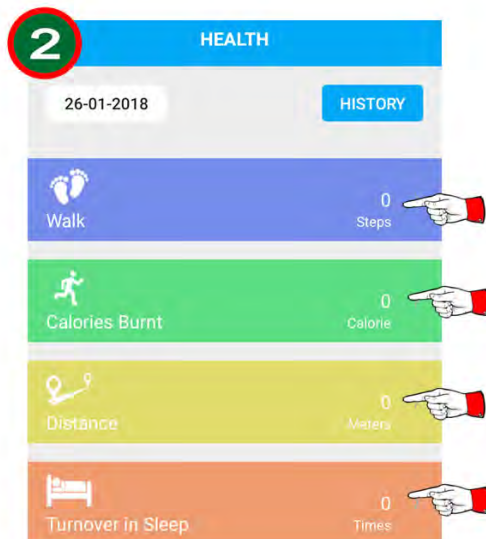

Our other services



www.DiyTrack.co.za

www.CycleTrack.co.za